 
SiteManager Training Manual



Module F Chapter 2

Materials Management (+)
Contract Materials (+)
Contract Sampling and Testing

Section F-2-2
Viewing Contract Sampling and
Testing Requirements




Viewing Contract Sampling and Testing Requirements


This document explains how to view the contract sample and testing requirements.




"Double-click" on Materials Management located on the Main Panel.

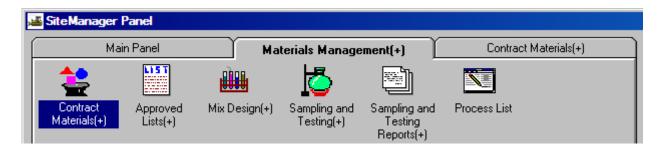

"Double-click" on Contract Materials.

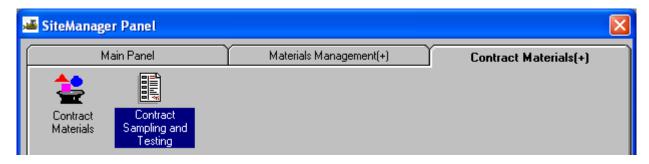


"Double-click" on Contract Sampling and Testing.

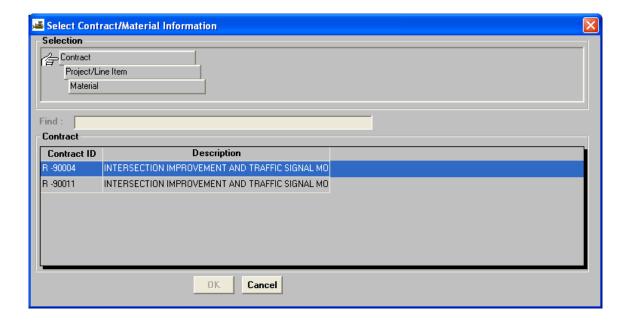


"Double-click" on the appropriate Contract ID.

Note: the **Contract ID** will not appear in this list until after sample and testing requirements have been generated.

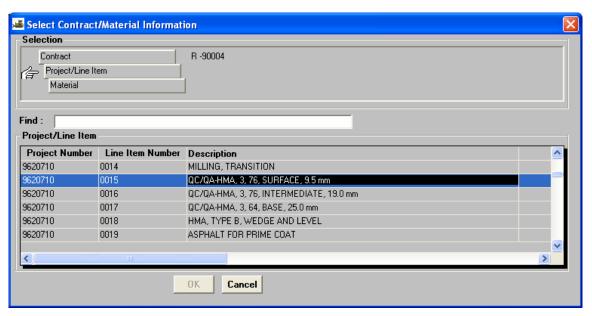


Use the scroll, Find or sort technique to locate the appropriate pay item. "Double-click" on the appropriate entry.

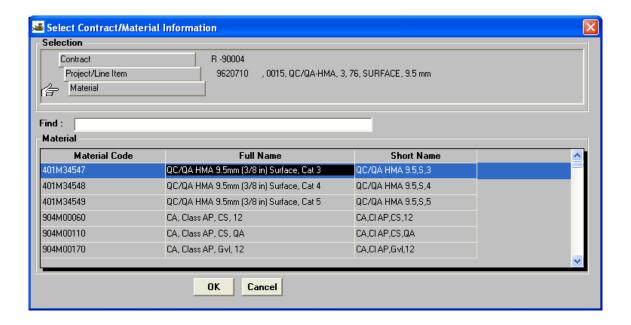

Use the scroll, Find or sort technique to locate the appropriate material code. "Double-click" on the appropriate **Material Code**.

Viewing the Materials tab

The material/pay item relationship can be viewed in the **Materials** tab.

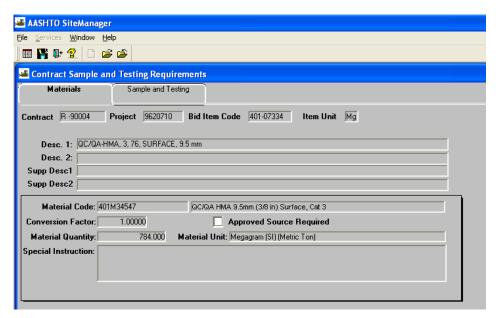

The Contract Sample and Testing Requirements window will open.

Verify the correct pay item and materials have been selected.

Conversion Factor: The **Conversion Factor** is used to convert the pay item quantity to the required material quantity.

Approved Source Required: The **Approved Source Required** check-box is not utilized by INDOT.


Material Quantity: The **Material Quantity** is the quantity of material needed to construct the pay item. It is automatically calculated using the bid pay item quantity plus approved change order pay item quantity with the conversion factor.

Material Unit: The **Material Unit** is the unit of measure for the material selected.

Special Instruction: The **Special Instruction** field contains sample and testing requirement information for the pay item/material relationship.

Viewing the Sample and Testing tab

The contract sample and testing requirements for a material/pay item can be viewed in the **Sample and Testing** tab.

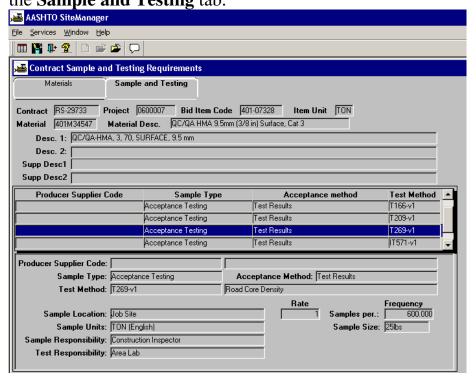


Producer Supplier Code: The **Producer Supplier Code** field is not utilized by INDOT.

Sample Type: The **Sample Type** field defines the purpose of the sample.

Acceptance Method: The **Acceptance Method** field indicates the Basis of Use for the material. The types of acceptance methods are listed below.

- Approved Material: Material on the Pre-Approved Materials list
- Approved P/S: Producer/Supplier that has been approved through INDOT's certified producer/supplier program
- Certification: Any type of certification (A,B,C,D or Other)
- External Document: Any external document that is scanned into an electronic format and imported into SiteManager through the attachment function
- Field Evaluation: acceptance method for pre-approved materials

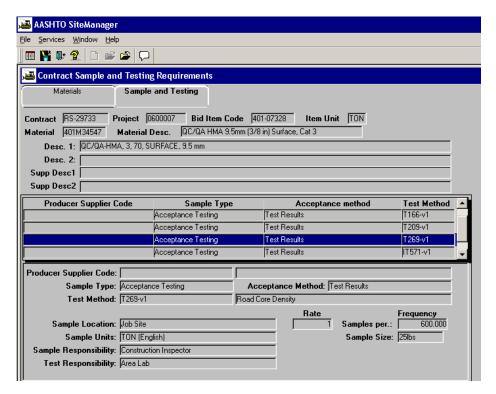


Acceptance Method: The **Acceptance Method** field indicates the Basis of Use for the material. The types of acceptance methods are continued listed below.

- Formulation Approval: Verifies material formulation is within specification limits
- Other: Not covered by any other acceptance method in the drop-down list. The detailed Acceptance Method shall be located in the Remarks balloon.
- Test Results: Contract related testing that will count toward the contract testing requirements. This method indicates there is test data entered on a Test Template. One sample can have multiple test methods associated to it.
- Transfer of Material: Materials that are transferred from one location to another
- Visual Inspection: acceptance by visual inspection

Test Method: The **Test Method** is the test method that is associated to the material/pay item relationship.

Sample Location: The **Sample Location** field indicates a general location where the sample is taken.

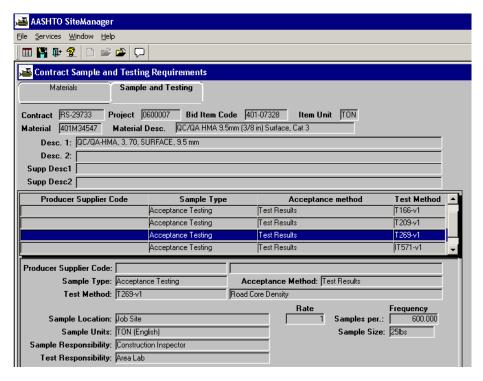

Rate and **Frequency**: The **Rate** and **Frequency** fields are used with the conversion factor to convert the pay quantity to the required number of tests for a material.

Example 1: HMA surface specification states that one sample is required for every 600 Mg of material. **Rate** is equal to 1 and **Frequency** is equal to 600.


Example 2: When there is only one test per contract, **Rate** is 1 and the **Frequency** is the largest value allowed in the field, 999,999,999.

Sample Units (Sample Size): The **Sample Size** field indicates the size of the sample required by the Test Method.

Sample Size (Sample Unit): The **Sample Units** field indicates the units of measure of the sample.


Sample Responsibility: The **Sample Responsibility** field provides guidance in determining who obtains the sample.

Test Responsibility: The **Test Responsibility** field provides guidance in determining who performs the test on the material.

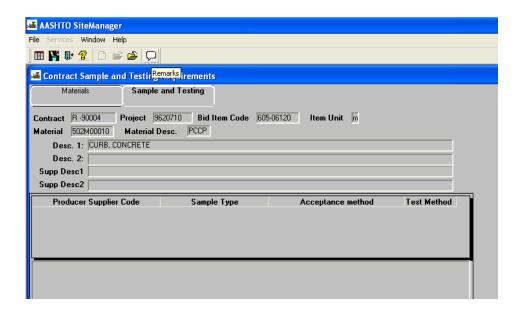


Remarks about the material/pay item relationship for the contract can be viewed by using the **Remarks** balloon.

"Click" on the **Remarks** D button located on the toolbar.

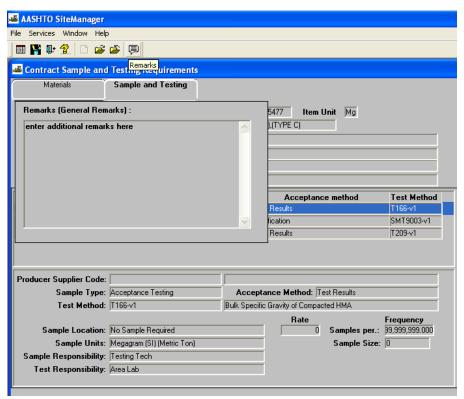

Close the **Remarks** (**General Remarks**) field by "clicking" on the **Remarks** \square button on the toolbar.

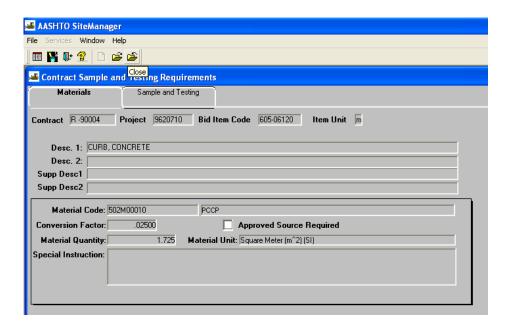

"Click" the Close button located on the toolbar to exit the Contract Sample and Testing Requirements window.